

Symbologies setting

- Enable



* UPC-A on



* UPC-E on



* EAN13 on



* EAN8 on



* Code39 on



* Codabar on



* Code93 on



* Code128 on



Interleaved 2of 5 on



Industrial 2 of 5 on



Matrix 2 of 5 on



MSI/Plessey on



Code32 on



Code11 on



Telepen on



GS1 DataBar Omnidirectional on



GS1 DataBar Limited on



GS1 DataBar Expanded on

- Disable



UPC-A off



UPC-E off



EAN13 off



EAN8 off



Code39 off



Codabar off



Code93 off



Code128 off



* Interleaved 2of 5 off



* Industrial 2 of 5 off



* Matrix 2 of 5 off



* MSI/Plessey off



* Code32 off



* Code11 off



* Telepen off



*GS1 DataBar Omnidirectional off



*GS1 DataBar Limited off



*GS1 DataBar Expanded off

Factory standard default settings

Items	Default setting
Interface	USB
Language (Keyboard)	English
Reading mode	Good read off
Terminator	CR
Data bits	8 bits
Stop bits	1 stop bit
Parity	None
Code ID	Off
Accuracy	Read 1 time
Emulate external keyboard	Disable
Enable 1D symbologies	UPC-A , UPC-E EAN13, EAN8 Code39, Code93 Code128, Codabar

Check version



* indicates default setting

Many thanks for choosing a POS-X product. For more product information please visit www.pos-x.com



Version: 3.1

POSX


ION Short Range BARCODE SCANNER

Quick Start Guide


POS-X Inc. tel: 360-738-8433
www.pos-x.com support@pos-x.com

How Do You Program Your Scanner?


1. Scan Start Configuration

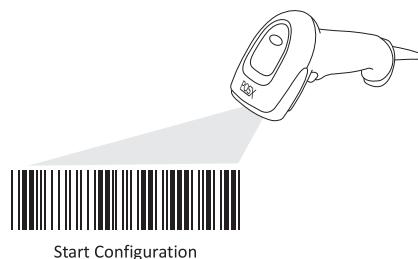

2. Scan all necessary configuration codes to configure the scanner.

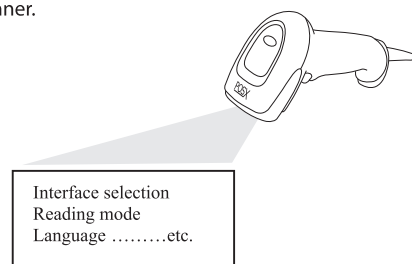

3. Scan End Configuration to save the changes.

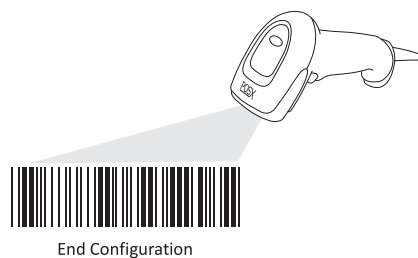

Scanning Mode Selection



* Good Read Off



Trigger on/off



Flash



Flash/auto power on



Continuous/Trigger off



Continuous/auto power on

Terminator selection- Keyboard & USB



None



* CR



Tab



CR+LF

Code ID Set-up

UPC-A Read



*Enable



Disable

UPC-A Expand to EAN-13



Enable



*Disable

UPC-A Check Digit Send



*Enable



Disable

UPC-A Truncate Leading Zone



Enable



*Disable

UPC-E Read



*Enable



Disable

UPC-E Check Digit Send



*Enable



Disable

UPC-E Truncate Leading Zone



Enable



*Disable

Resetting The Standard Product Defaults

If you aren't sure what programming options are in your scanner, or you've changed some options and want the factory settings restored, scan the bar code below.



Standard Product Default Setting